

## Sloping Acrylic Shelving Fixing CG11 & CG13 Support Installation

- 1) Attach a clamp support to each corner of the acrylic shelves at 1/2"-1" distance from edge (fig 1).

 
 
 
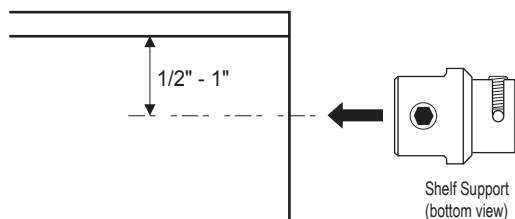 


fig 1

- 2) **Mark cable positions on floor area** - Depending on the angle that you choose for shelving, mark cable positions on the floor. With the use of a plumb line, mark and fix cables to ceiling (ensuring that fixings are secure).
- 3) Install cables as per "**Cable Fixing Instructions**" for **CA4** supplied.
- 4) **Shelf fitting** - As a guideline, the lowest shelf should be fixed approx. 24" from the floor and subsequent shelves approx 12" apart.
- 5) **Affix shelf to cables**. Adjust shelf to a horizontal position, preferably with a spirit level. Repeat procedure for other shelves.

## Options - Double sided Clamp Supports

- 1) The double sided clamp support **CG21 & CG23** will need to be fitted to the cable before the second glass shelf is attached.
- 2) For proper, and easier installation it will require two people.

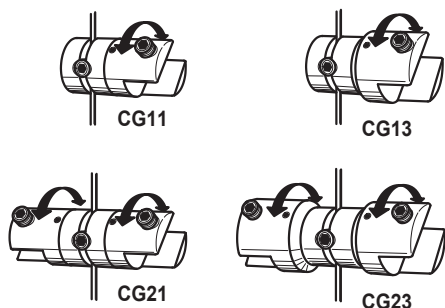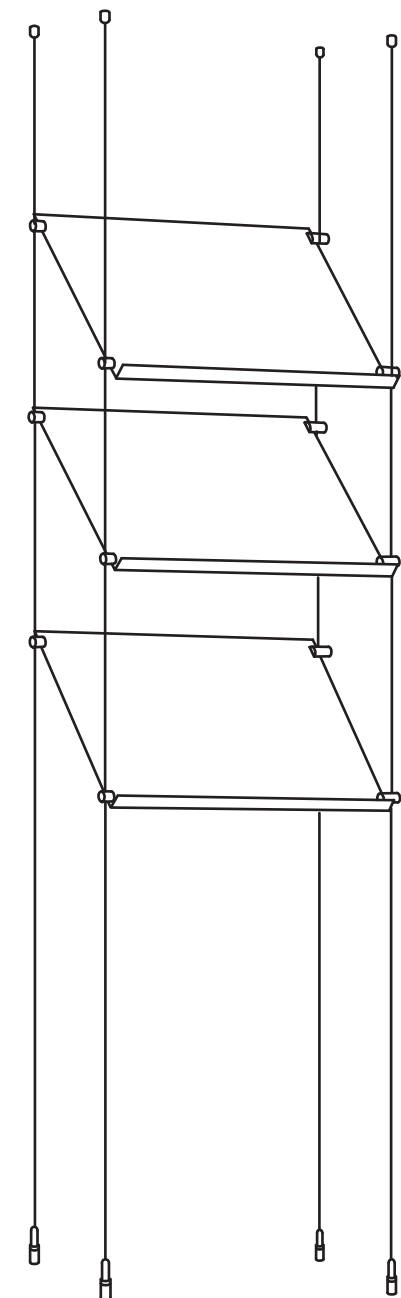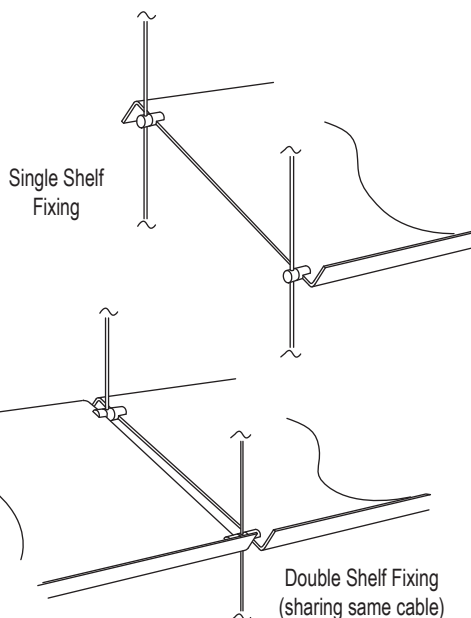

## INSTALLATION TIPS

