



***** DO NOT INSTALL INTO PLASTERBOARD (DRYWALL) CEILINGS OR WALLS IF YOUR APPLICATION INCLUDES GLASS SHELVING OR OTHER HEAVY ITEMS.**

Top to Bottom (C301-4) Cable Installation

IMPORTANT: It is essential to check that the top ceiling fixings are strong enough to take the weight of the items being displayed, while allowing for the tension in the cables.

- 1) Affix fitting (A) to ceiling:
 - for wooden ceilings use a wood screw.
 - for cavity ceilings use a spring toggle bolt.
 - for solid ceilings use a rawl plug and screw.
- 2) Screw fitting (B) to fitting (A).
- 3) Using a plumb-line, descend from (A), and fix (F) to floor using appropriate type of fixing.
- 4) Loosen the grub screws in fitting (E), using the Allen key provided, and slide fittings (C), (D), and (E) up the cable.
- 5) Pull down and cut off excess cable as per diagram below.
- 6) Tighten (E) on the end of the cable.
- 7) Adjust the tension of the cable by screwing (C) into (F).

NOTE: It is important to check the strength of the top fixing. NOVA DISPLAY® takes no responsibility for incorrect installation. This responsibility rests with the installer.

Cables are not supplied with fixing screws.

