


Installation Guidelines

RS03 & P02 Support Installation

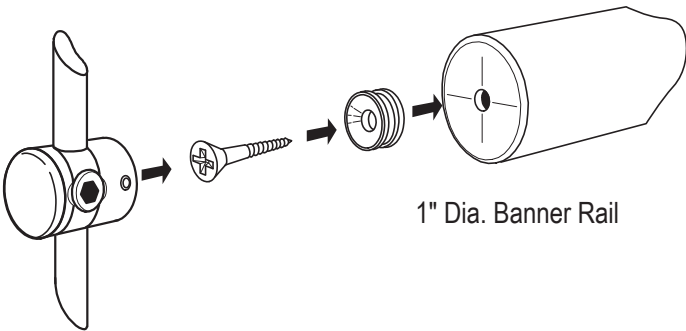

RS05 Rod Support Installation

