


Installation Guidelines





NOVADISPLAY®
INNOVATIVE DISPLAY SOLUTIONS

1.5mm Cable Display Systems

800.753.9688 • www.novadisplay.com

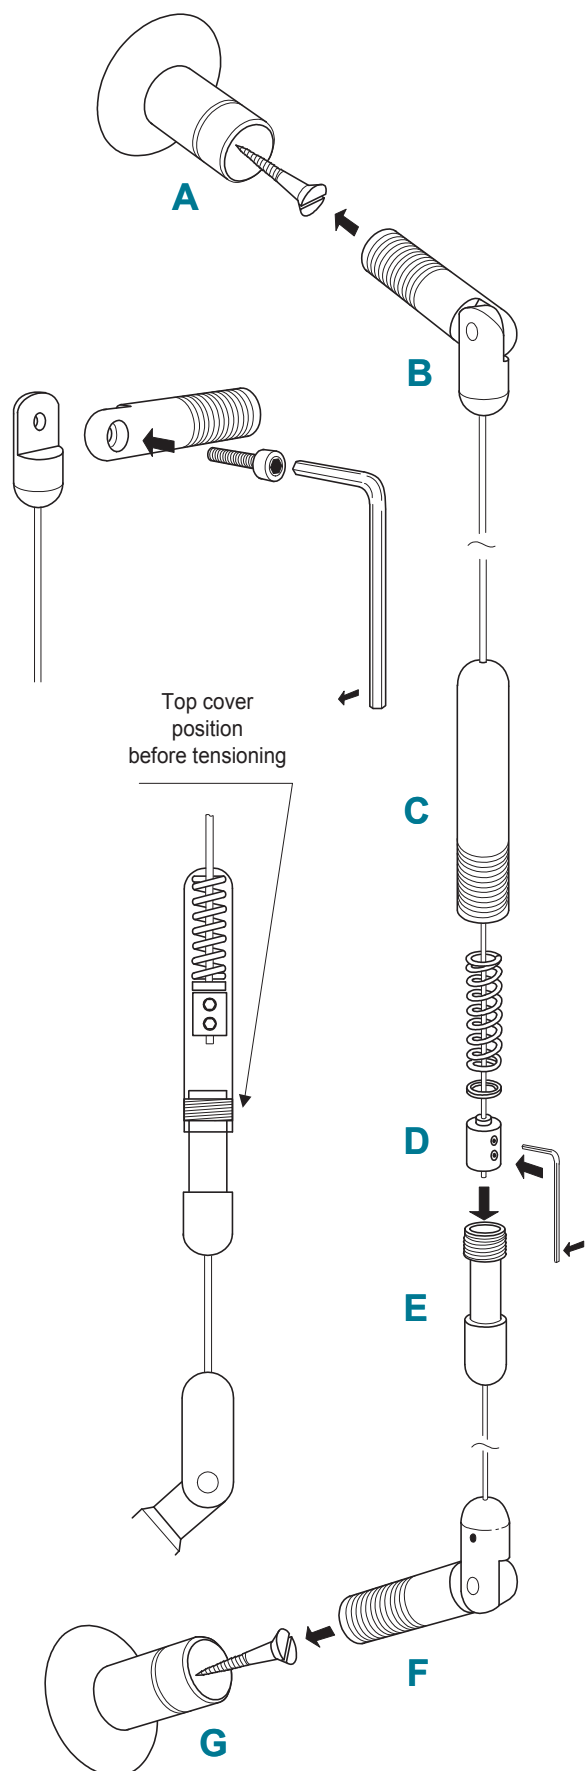

INSTALLATION TIPS

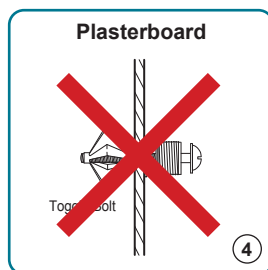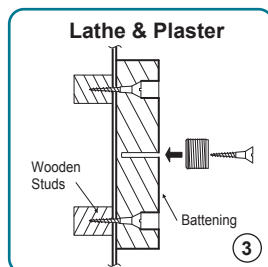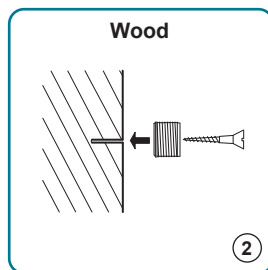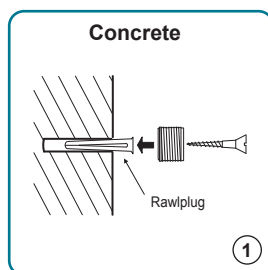

Angled Top to Bottom (CAA) Cable Installation


IMPORTANT: It is essential to check that the top ceiling fixings are strong enough to take the weight of the items being displayed, while allowing for the tension in the cables.

- 1) Select the upper height to which cable is to start. Affix base fitting (A-B) to the wall using a suitable fixing for the wall type:
 - for wooden walls use a wood screw.
 - for a cavity wall use a spring toggle bolt.
 - for a solid wall use a rawlplug and screw.
- 2) Using a plumb line, descend from (A) to the required position for base fitting (G-F) and affix.
- 3) Separate the two sections of part (C) and (E), and loosen the grub screws in the small brass piece (D), using the Allen key provided, and slide fittings up the cable to the desired length. (Do not remove from cable).
- 4) Having selected the required length, tighten the brass fitting, and cut off the excess cable.
- 5) Re-connect the two sections (C) and (E), and tighten to adjust tension.


Note: It is important to check the strength of the top fixing. NOVADISPLAY® takes no responsibility for incorrect installation. This responsibility rests with the installer.

Cables are not supplied with fixing screws.

***** DO NOT INSTALL INTO PLASTERBOARD (DRYWALL) CEILINGS OR WALLS IF YOUR APPLICATION INCLUDES GLASS SHELVING OR OTHER HEAVY ITEMS.**

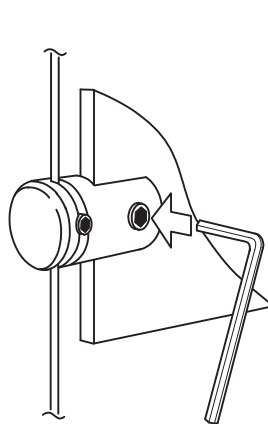

Panel Clamp Support

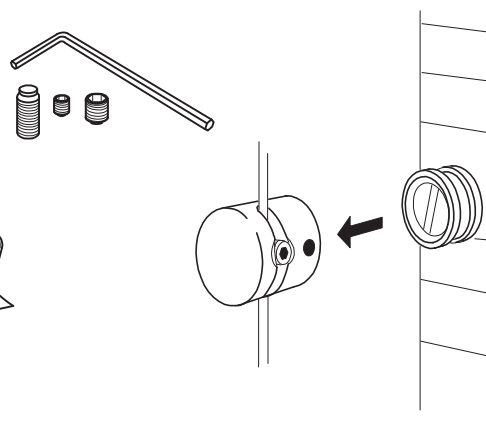

Panel Support w/P02 Attachment