

Installation Guidelines


NOVADISPLAY®
INNOVATIVE DISPLAY SOLUTIONS

1.5mm Cable Display Systems

800.753.9688 • www.novadisplay.com


INSTALLATION TIPS

Concrete

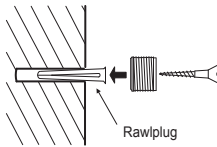


①

Wood

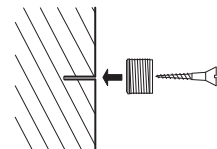


②

Lathe & Plaster

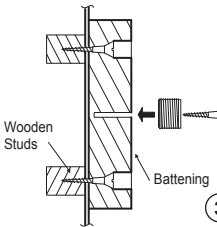

③

Plasterboard

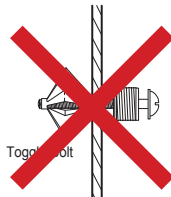

④

Angled Top to Floor (CAF) Cable Installation



IMPORTANT: It is essential to check that the top ceiling fixings are strong enough to take the weight of the items being displayed, while allowing for the tension in the cables.

- 1) Select the upper height at which the cable is to start. Affix base fitting (A-B) to the wall using a suitable fixing for wall type:
 - for wooden walls use a wood screw.
 - for a cavity wall use a spring toggle bolt.
 - for a solid wall use a rawplug and screw.
- 2) Using a plumb-line, descend from (A), and affix (F) to the floor using the appropriate type of fixing.
- 3) Loosen the grub screws in fitting (E), using the allen key provided, and slide fittings (C), (D), and (E) up the cable.
- 4) Pull down the cable and cut off excess in-line with the decorative line around fitting (F) (see below).
- 5) Tighten (E) on the end of the cable.
- 6) Adjust the tension of the cable by screwing (C) into (F).


Note: It is important to check the strength of the top fixing(s). NOVA DISPLAY® takes no responsibility for incorrect installation. This responsibility rests with the installer.

Cables are not supplied with fixing screws.

***** DO NOT INSTALL INTO PLASTERBOARD (DRYWALL) CEILINGS OR WALLS IF YOUR APPLICATION INCLUDES GLASS SHELVING OR OTHER HEAVY ITEMS.**

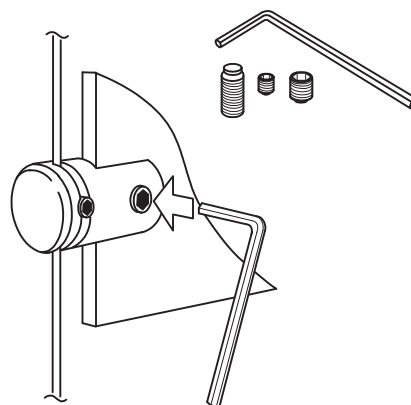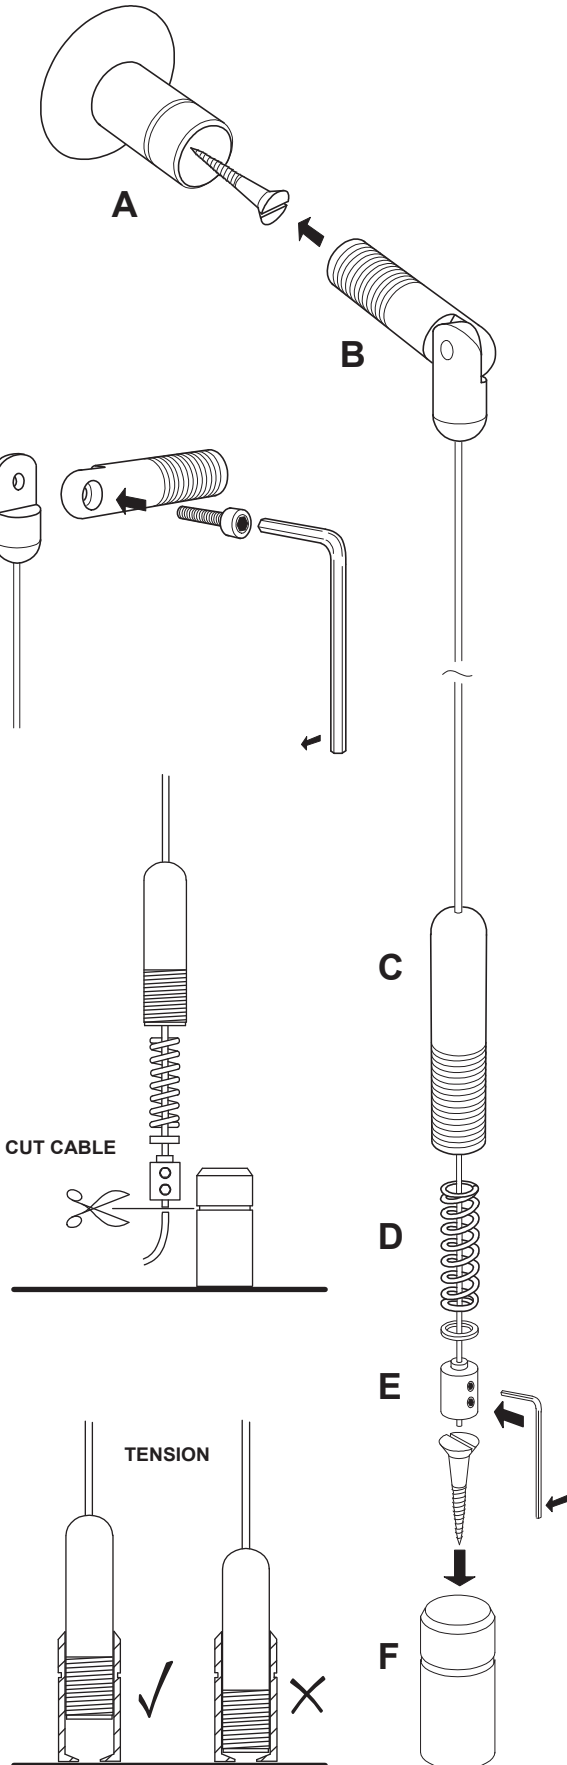

Panel Clamp Support

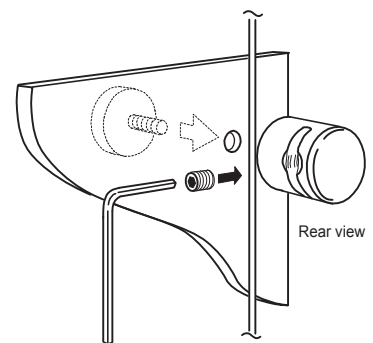

Panel Support w/Holes

Rear view