

Installation Guidelines


NOVADISPLAY®
INNOVATIVE DISPLAY SOLUTIONS

AnoFrame - Cable Clips & Ball Chain


800.753.9688 www.novadisplay.com



Ball Chains

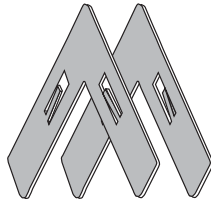


Corner
Brackets

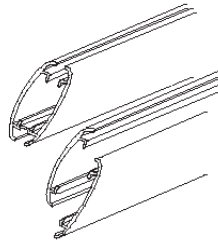

AnoFrame
Round Rails

or

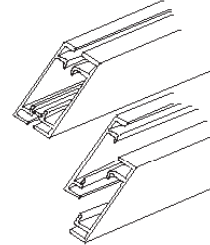

AnoFrame
Square Rails



Cable Clips

Instructions for assembly

Step 1

Insert corner brackets into vertical AnoFrame sides. Fig. 1 & Fig. 2.

Note: Assembly brackets tension tabs face towards outside of frames. Split rail side is made up of 2 separate pieces.

Step 2

Insert single ball of ball chain into inner channel of Cable Clip. The cable should snap into place. Fig. 3.

Step 3

Align one round end of cable clip with top channel of the aluminum rail and insert. Once in place, insert end of ball chain into channel. Then press down on the other round end of the cable clip and slide into rail by pushing on the clip. Fig. 4 Repeat steps 2 & 3 for second cable clip.

Note: Be sure to push on the cable clip in order to slide the ball chain into place. Do not pull on, or push against, the ball chain as this will cause it to bind in the channel.


Step 4

Assemble frame following steps in. Fig. 5 sliding sides together in the order shown.

Step 5

Insert poster. Fig 6.

Instructions illustrate a side-load frame. Assembly steps are the same for top-load.

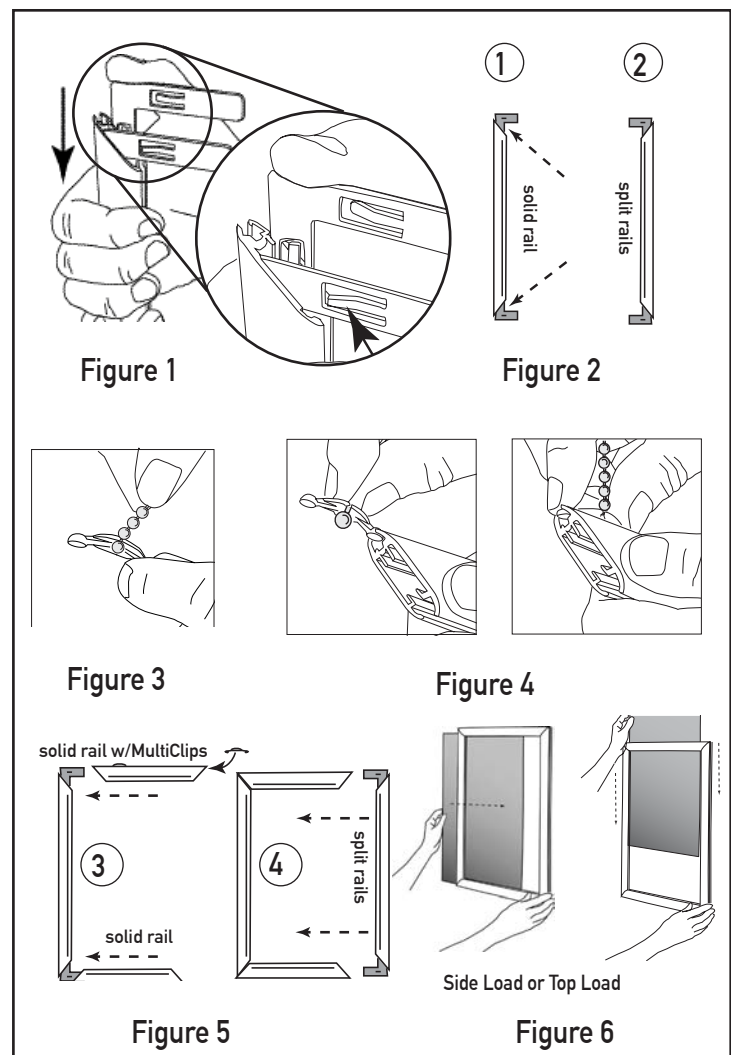

Installation Guidelines


NOVADISPLAY
INNOVATIVE DISPLAY SOLUTIONS

AnoFrame - Cable Clips & Ball Chain


800.753.9688 www.novadisplay.com



Loop and
Saucer

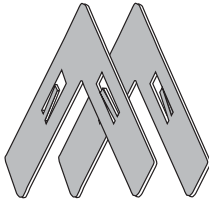


Corner
Brackets

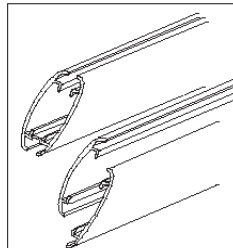

AnoFrame
Round Rails

or

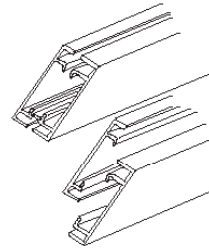

AnoFrame
Square Rails



Cable Clips

Instructions for assembly

Step 1

Insert corner brackets into vertical AnoFrame sides. Fig. 1 & Fig. 2.

Note: Assembly brackets tension tabs face towards outside of frames. Split rail side is made up of 2 separate pieces.

Step 2

Place cable onto inner channel of Cable Clip. The cable should snap into place. Fig. 3

Step 3

Align one end of the Cable Clip with the top channel of the aluminum holder. Then insert one round end, then press down on the other round end and slide Cable Clip into rail. Fig. 4

Step 4

Assemble frame following steps in. Fig. 5 sliding sides together in the order shown.

Step 5

Insert poster. Fig. 6

Instructions illustrate a side-load frame. Assembly steps are the same for top-load.

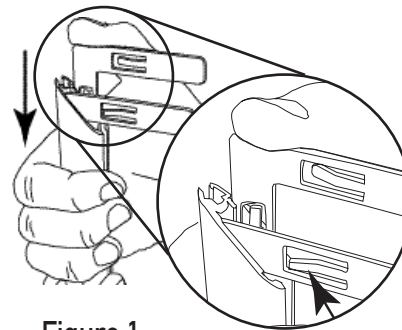


Figure 1

Figure 2

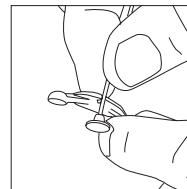


Figure 3

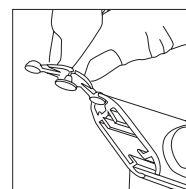


Figure 4

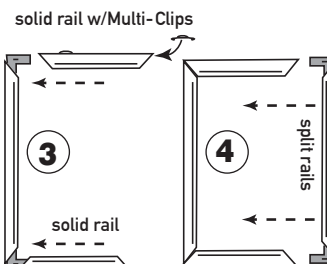
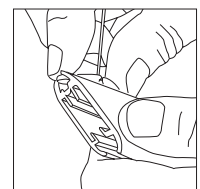


Figure 5

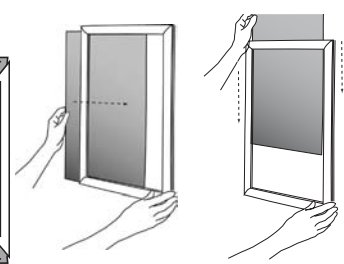



Figure 6

Installation Guidelines


NOVADISPLAY
INNOVATIVE DISPLAY SOLUTIONS

AnoFrame - Cable Clips & Cable & Saucer


800.753.9688 www.novadisplay.com

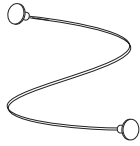

Cable and
Saucer

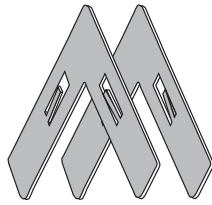


Corner
Brackets

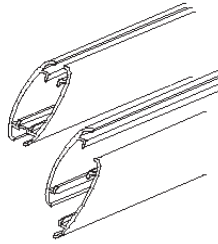

AnoFrame
Round Rails

or

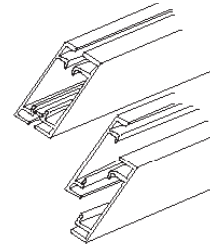

AnoFrame
Square Rails



Cable Clips

Instructions for assembly

Step 1

Insert corner brackets into vertical AnoFrame sides. Fig. 1 & Fig. 2.

Note: Assembly brackets tension tabs face towards outside of frames. Split rail side is made up of 2 separate pieces.

Step 2

Place cable onto inner channel of Cable Clip. The cable should snap into place. Fig. 3

Step 3

Align one end of the Cable Clip with the top channel of the aluminum holder. Then insert one round end, then press down on the other round end and slide Cable Clip into rail. Fig. 4

Step 4

Assemble frame following steps in. Fig. 5 sliding sides together in the order shown.

Step 5

Insert poster. Fig. 6

Instructions illustrate a side-load frame. Assembly steps are the same for top-load.

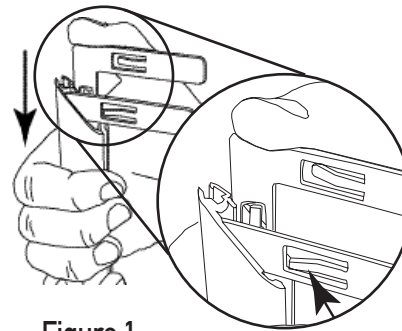


Figure 1

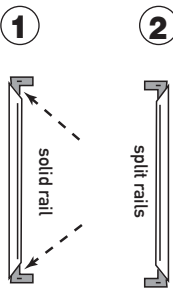


Figure 2

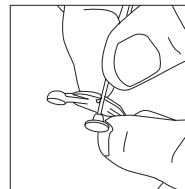


Figure 3

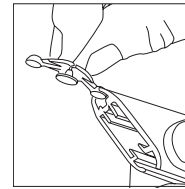


Figure 4

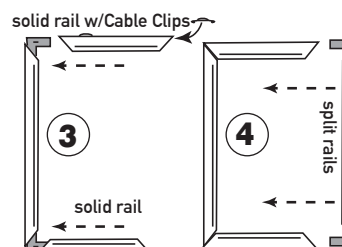
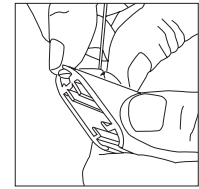


Figure 5

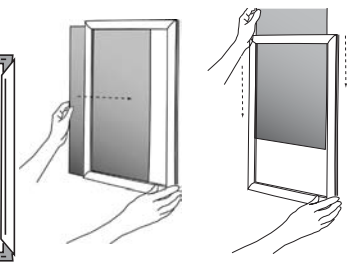



Figure 6

Installation Guidelines


NOVADISPLAY
INNOVATIVE DISPLAY SOLUTIONS

AnoFrame - MultiClips

800.753.9688 www.novadisplay.com

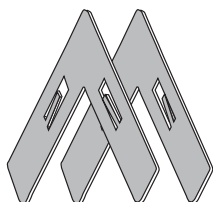


**Corner
Brackets**

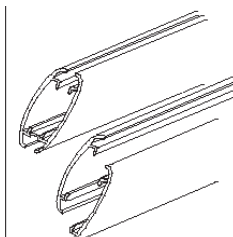

**AnoFrame
Round Rails**

or

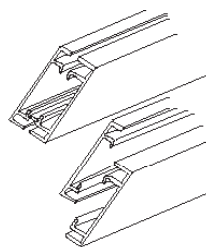

**AnoFrame
Square Rails**



MultiClips

Instructions illustrate
a side-load frame.
Assembly steps are
the same for top-load.

Instructions for assembly

Step 1

Insert corner brackets into vertical AnoFrame sides. **Fig. 1 & Fig. 2.**

Note: Assembly brackets tension tabs face towards outside of frames. Split rail side is made up of 2 separate pieces.

Step 2

Squeeze sides of MultiClip together. **Fig. 3**

Step 3


Align the bottom rail of the MultiClip with the top channel of the aluminum holder. Slide MultiClip into rail. **Fig. 4** Repeat steps 2 & 3 for second MultiClip.

Step 4

Assemble frame following steps in. **Fig. 5** sliding sides together in the order shown.

Step 5

Insert poster. **Fig. 6**


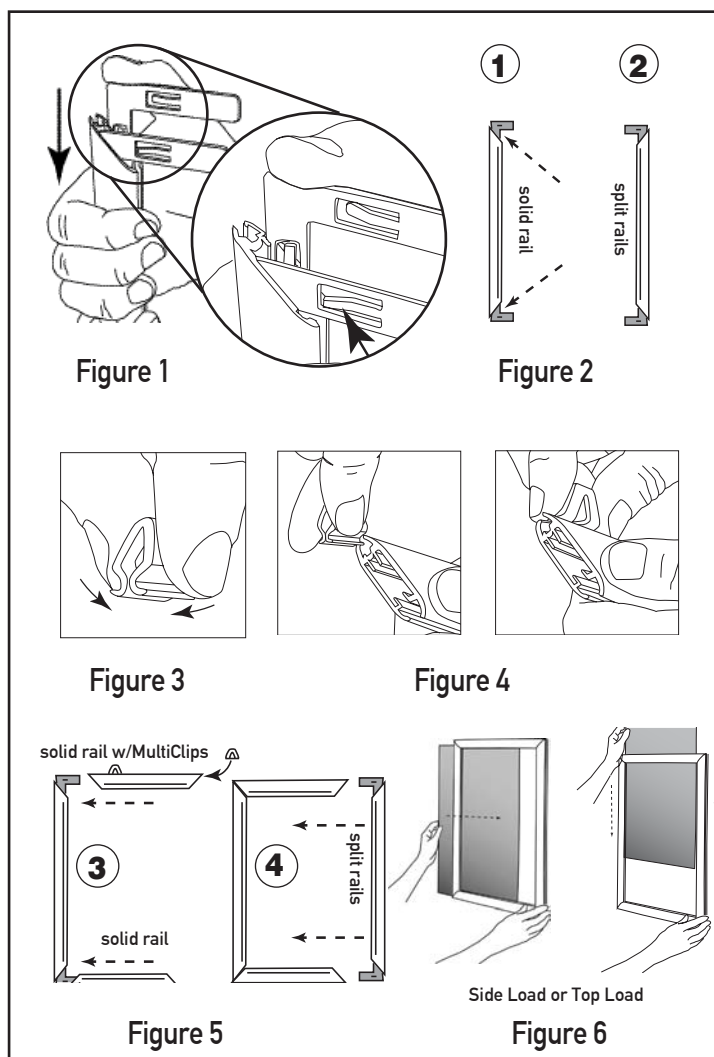


Installation Guidelines

NOVADISPLAY
INNOVATIVE DISPLAY SOLUTIONS


AnoFrame - Off-the-Wall Brackets

800.753.9688 www.novadisplay.com

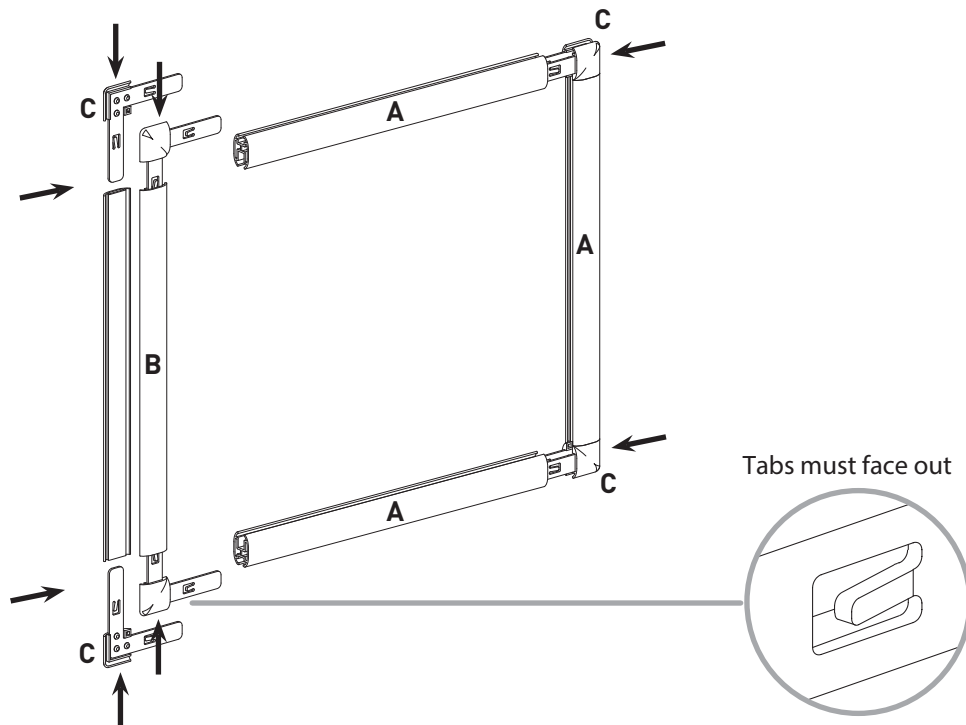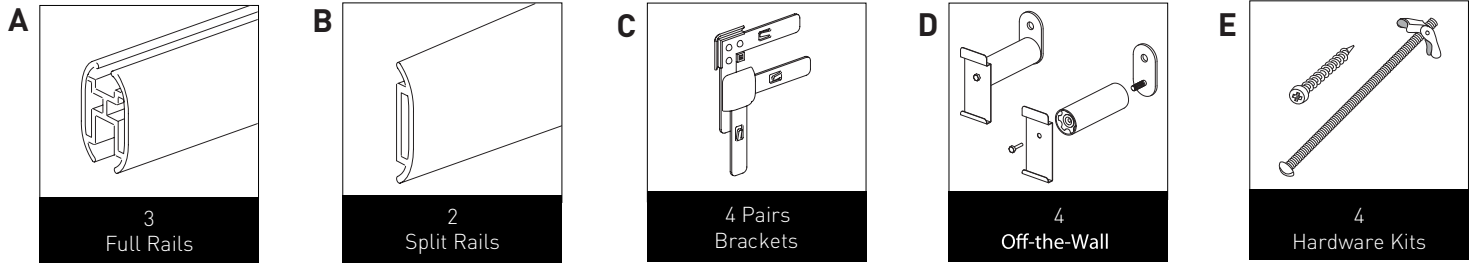



Measure and level
Off-the-Wall Brackets
then screw into wall
at frame corners

Use 1 inch wood screw
for wood and other
solid surfaces. Use 3
inch toggle anchor for
drywall and other
hollow surfaces;
predrilling 3/8" hole is
necessary.

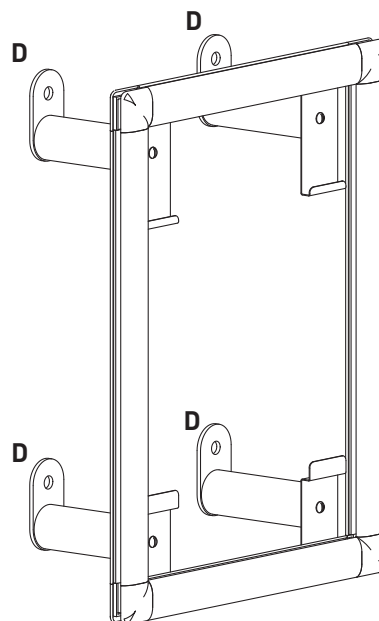

Hanging
Top
of Frame

Hanging
Bottom
of Frame

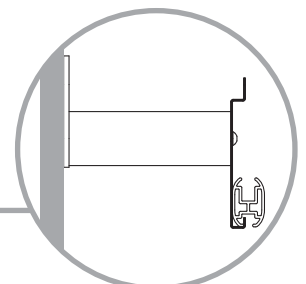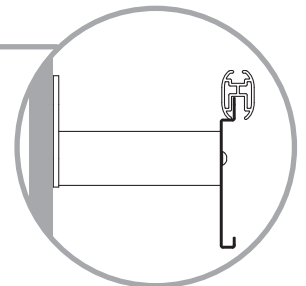


Installation Guidelines


NOVADISPLAY
INNOVATIVE DISPLAY SOLUTIONS

AnoFrame - Slatwall Hanger

800.753.9688 www.novadisplay.com

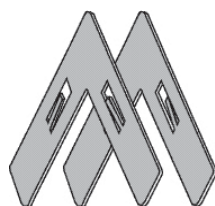


**Corner
Brackets**

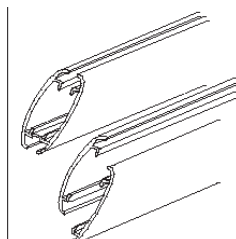


**AnoFrame
Round Rails**

or

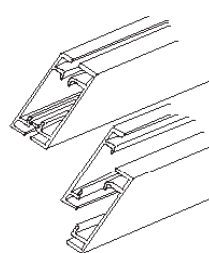

**AnoFrame
Square Rails**

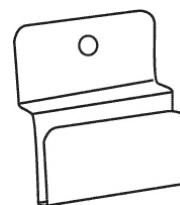

Slatwall Hanger

Instructions illustrate
a side-load frame.
Assembly steps are
the same for top-load.

Instructions For Hanging

Step 1

Locate the two split rails and the solid rail that is the same length as the split rails. Insert corner brackets into side AnoFrame rails. Insert two corner brackets into each end of the solid side Ano rail. Insert one corner bracket into each end of each split side Ano rail. **Fig. 1 & Fig. 2**

Note: Tension tabs on corner brackets face towards outside of frame.

Step 2

Finish assembling frame by following sequence in **Fig. 3**.

Step 3

Insert hangers into upper portion of slatwall. **Fig. 4**

Note: To ensure that the frame hangs level use two hangers placed an equal distance in from each side of the frame.

Step 4

Place the AnoFrame on the hangers using the bottom channel of the top Ano rail. **Fig 5**

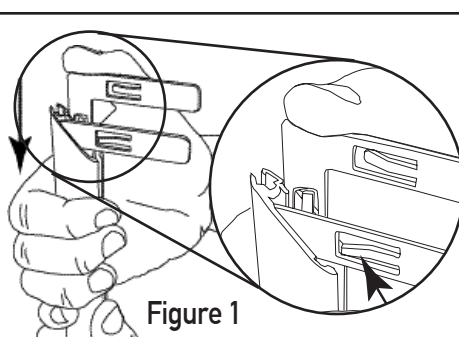


Figure 1

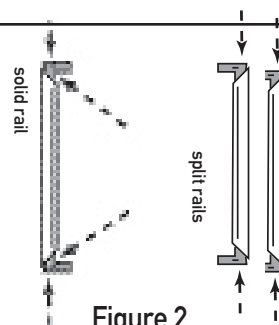


Figure 2

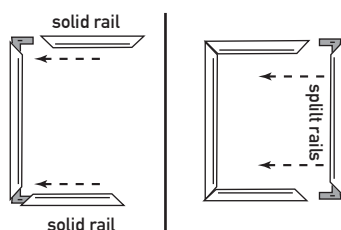


Figure 3

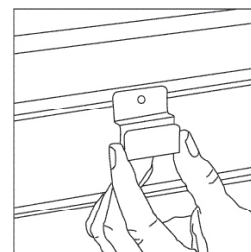


Figure 4

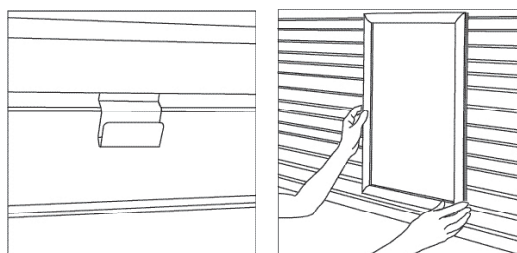



Figure 5

Installation Guidelines


NOVADISPLAY
INNOVATIVE DISPLAY SOLUTIONS

AnoFrame - Wall Hanger

800.753.9688 www.novadisplay.com

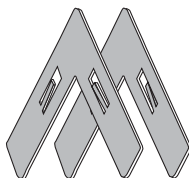


**Corner
Brackets**

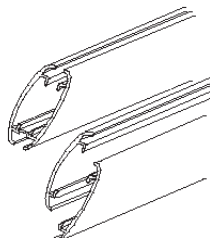


**AnoFrame
Round Rails**

or

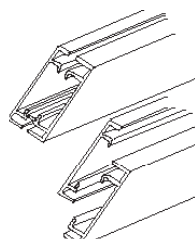

**AnoFrame
Square Rails**

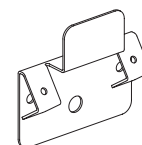

**Wall Mounting
Hangers**

Instructions illustrate
a side-load frame.
Assembly steps are
the same for top-load.

Instructions For Hanging

Step 1

Locate the two split rails and the solid rail that is the same length as the split rails. Insert corner brackets into side AnoFrame rails. Insert two corner brackets into each end of the solid side Ano rail. Insert one corner bracket into each end of each split side Ano rail. **Fig. 1 & Fig. 2**

Note: Tension tabs on corner brackets face towards outside of frame.

Step 2


Finish assembling frame by following sequence in **Fig. 3**.

Step 3

Install wall mounting hangers using either nails or screw. Hammer nails into wall or use a Phillips head screwdriver for screws. **Fig. 4**

Step 4

Slide AnoFrame onto wall mounting hangers. **Fig 5**. Insert poster.

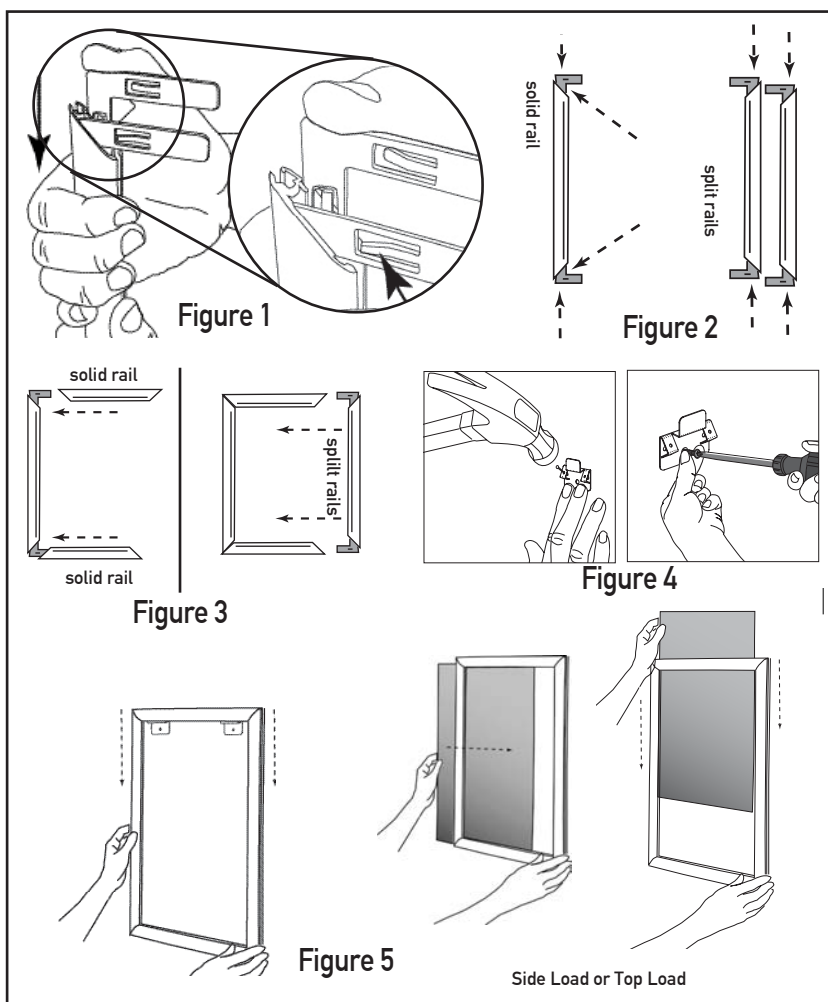


Installation Guidelines


NOVADISPLAY
INNOVATIVE DISPLAY SOLUTIONS

AnoFrame - Bottom Wall Hanger


800.753.9688 www.novadisplay.com

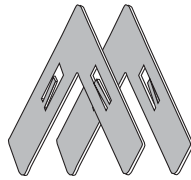

**Corner
Brackets**

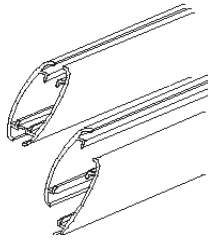


**AnoFrame
Round Rails**

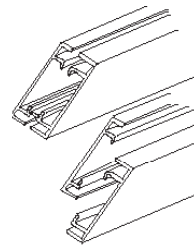


**AnoFrame
Square Rails**

or

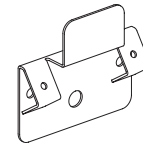

**Wall Mounting
Hangers**

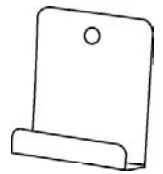

**Bottom Wall
Hangers**

Instructions illustrate
a side-load frame.
Assembly steps are
the same for top-load.

Instructions For Hanging

Step 1

Locate the two split rails and the solid rail that is the same length as the split rails. Insert corner brackets into side AnoFrame rails. Insert two corner brackets into each end of the solid side Ano rail. Insert one corner bracket into each end of each split side Ano rail. **Fig. 1 & Fig. 2**

Note: Tension tabs on corner brackets face towards outside of frame.

Step 2

Finish assembling frame by following sequence in **Fig. 3**.

Step 3

Install wall mounting hangers using either nails or screw. Hammer nails into wall or use a Phillips head screwdriver for screws. **Fig. 4**

Step 4


Slide AnoFrame onto wall mounting hangers. **Fig 5**

Step 5

Install 2 bottom wall hangers using screws. This secures frame in place. **Fig 6**

Step 6

Insert poster. **Fig 7**

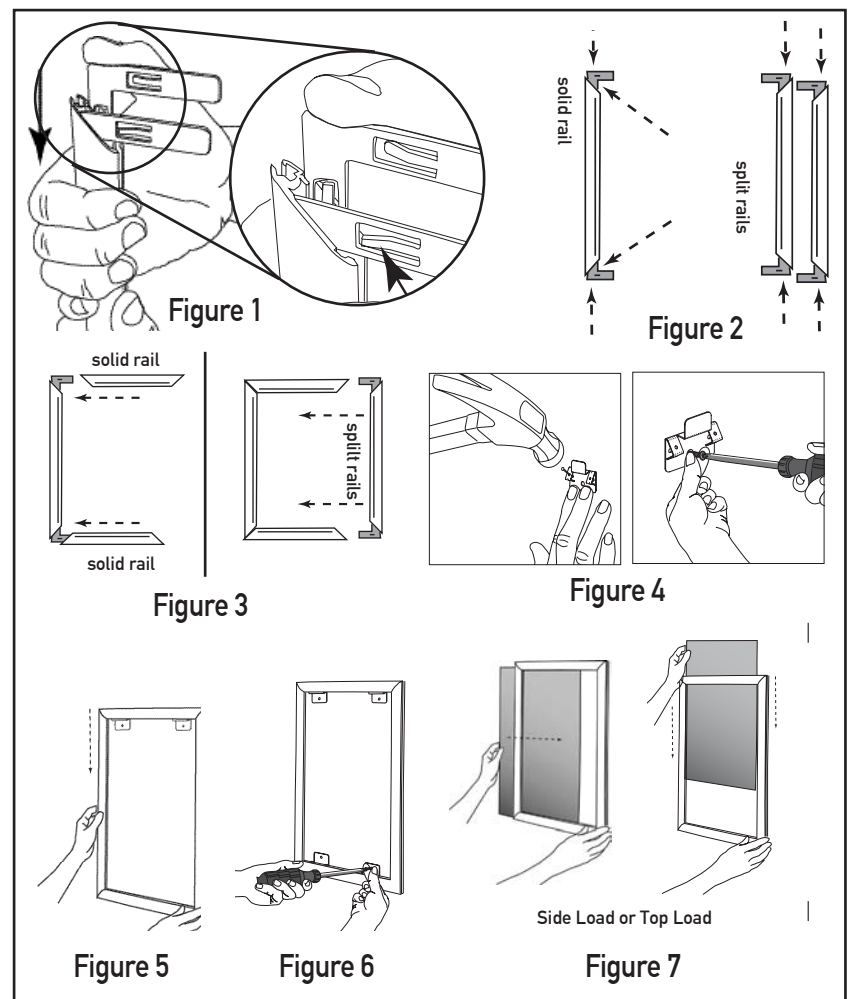


Installation Guidelines


NOVADISPLAY
INNOVATIVE DISPLAY SOLUTIONS

AnoFrame - Window Mount

800.753.9688 www.novadisplay.com

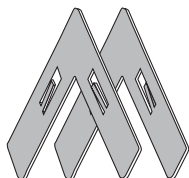


**Corner
Brackets**

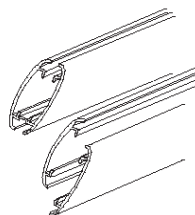


**AnoFrame
Round Rails**

or

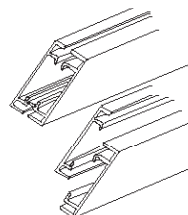

**AnoFrame
Square Rails**

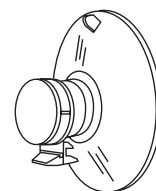

Window Mounts

Instructions illustrate
a side-load frame.
Assembly steps are
the same for top-load.

Instructions for Hanging

Step 1

Locate the two split rails and the solid rail that is the same length as the split rails. Insert corner brackets into side AnoFrame rails. Insert two corner brackets into each end of the solid side Ano rail. Insert one corner bracket into each end of each split side Ano rail. **Fig. 1 & Fig. 2**

Note: Tension tabs on corner brackets face towards outside of frame.

Step 2

Slide the Window Mounts into the top rail of the EconoFrame rail. **Fig. 3**


Step 3

Finish assembling frame following the sequence in **Fig. 4**

Step 4

Insert poster. **Fig. 5**

Note: For best performance when first applied & occasionally thereafter, press the middle of the cup (on the cap) to "burp" extra air out.

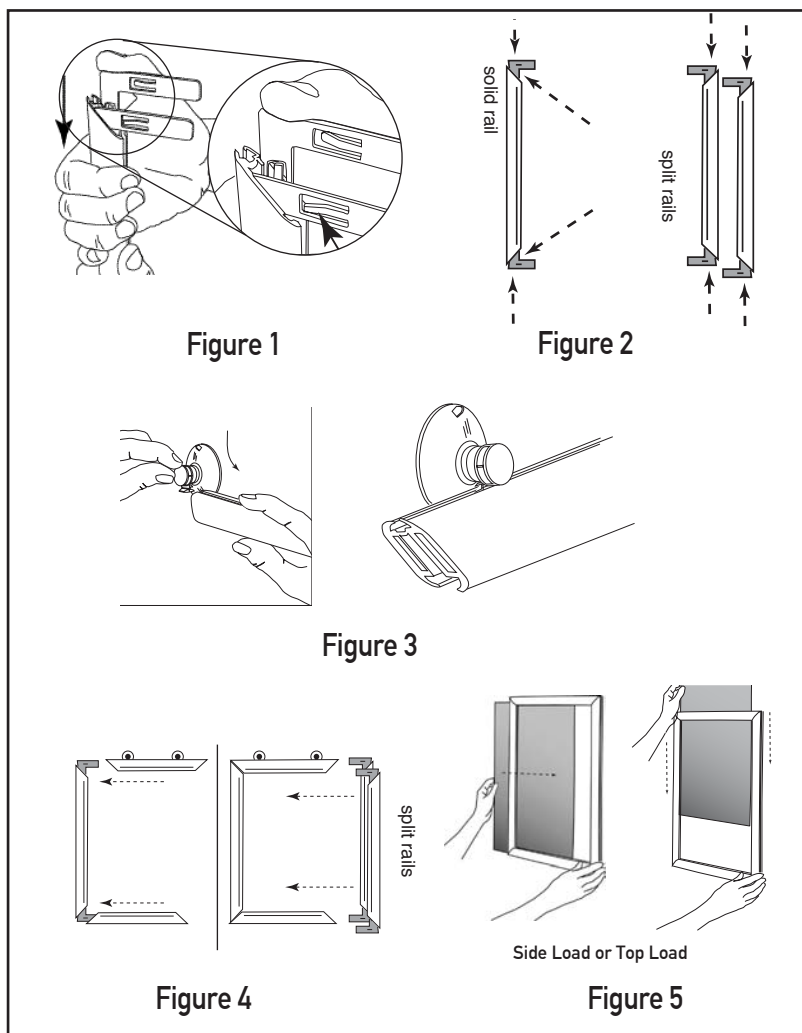


Installation Guidelines


NOVADISPLAY®
INNOVATIVE DISPLAY SOLUTIONS

AnoFrame - Spider Anchor & Panel Dividers


800.753.9688 www.novadisplay.com

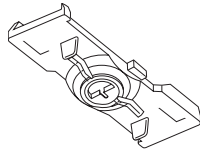

Spider Anchor

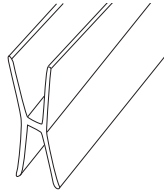

Panel Dividers

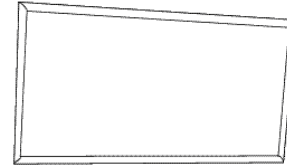

AnoFrame

Instructions for Assembly

Step 1

Insert graphic for first panel. **Fig. 1**
Slide all the way to end of frame.

Step 2

Insert one Panel Divider. Pinch ends slightly to fit into frame rails. **Fig. 2**

* Do not bend Panel Divider.

Slide Panel Divider towards graphic until it captures graphic panel.

Step 3

Insert graphic for second panel. **Fig. 3**
Slide it into channel of first Panel Divider.

Step 4

Insert another Panel Divider.
Follow instructions from **Step 2**.

Step 5

Insert graphic for third panel. **Fig. 4**
Slide it into channel of second Panel Divider.

Step 6

Push one ball chain through hole in bottom of each Spider Anchor. Let end of ball chain fall into pocket next to the hole. Pull remainder of ball chain back through hole snapping end of ball chain into the pocket of the anchor. **Fig 5**

Twist Spider Anchors onto ceiling grid.

Instructions illustrate a side-load frame. Assembly steps are the same for top-load.

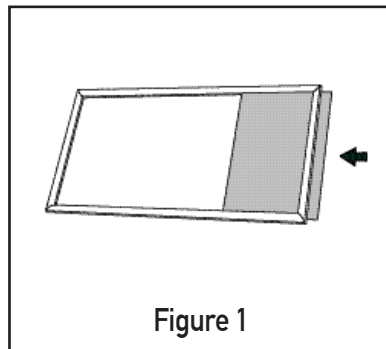


Figure 1

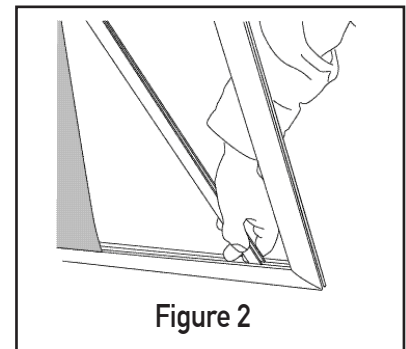


Figure 2

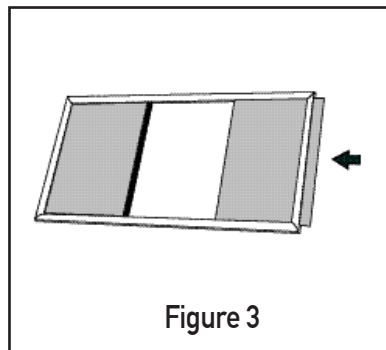


Figure 3

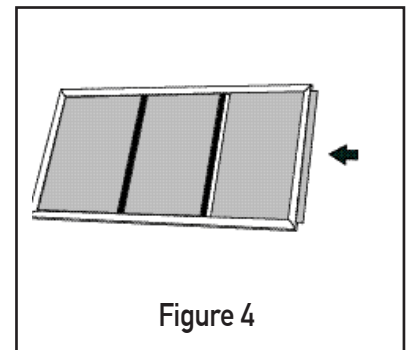


Figure 4


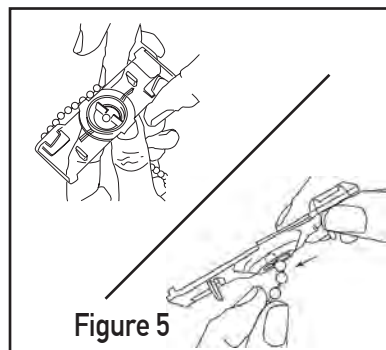


Figure 5

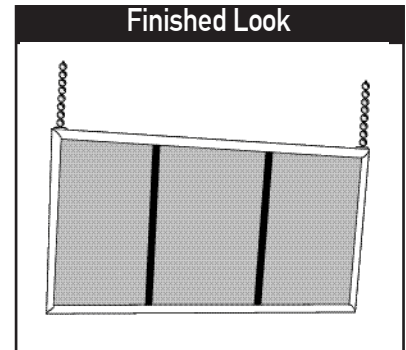

Finished Look