

Installation Guidelines

Glass Shelving Fixing - C3S-03 & C3S-04 Supports Installation

- 1) Attach a clamp support to each corner of the glass shelf at 3/4" - 1" distance from edge (fig 1).




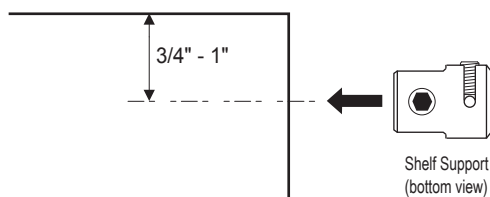


fig 1



- 2) **Mark cable positions on floor area** - Lay shelves on floor, and mark cable positions or use measurements. With the use of a plumb line, mark and fix cables to ceiling (ensuring that fixings are secure).
- 3) Install cables as per "**Cable Fixing Instructions**" for **CA4-3** supplied.
- 4) **Shelf Fitting** - As a guideline: the lowest shelf should be fixed approx. 24" from the floor, and subsequent shelves approx 12" apart.
- 5) **Fix shelf to cables** - Adjust shelf to a horizontal position, preferably with a spirit level. Repeat procedure for other shelves.

Options - Double sided Clamp Supports

- 1) The double sided clamp support **C3S-04** will need to be fitted to the cable before the second glass shelf is attached.
- 2) For proper, and easier installation it will require two people.

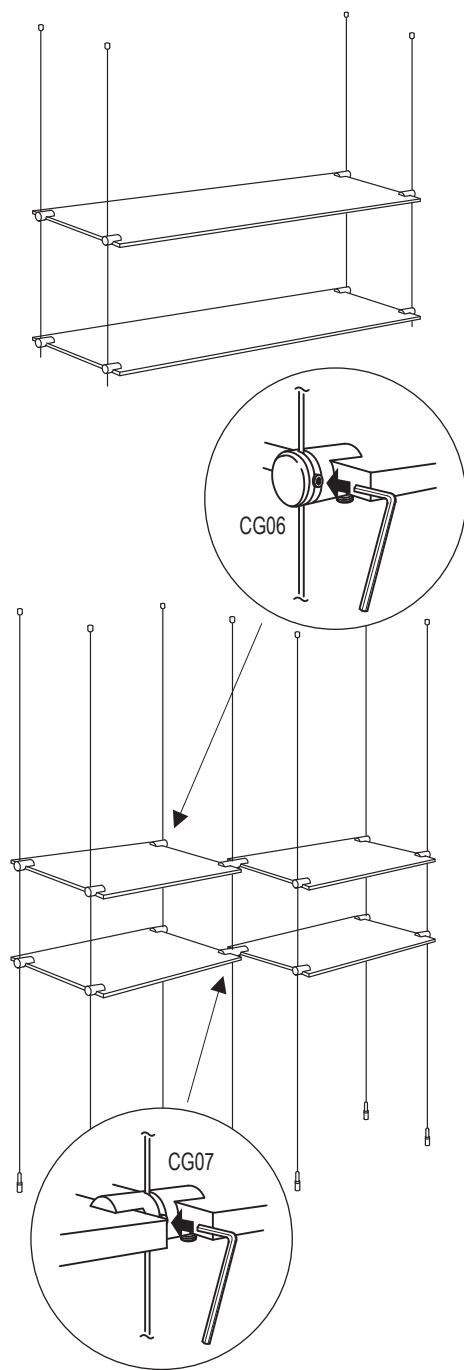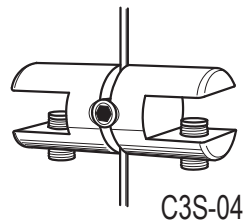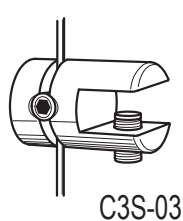


Options - Side & Front Shelf Clamp Fixing

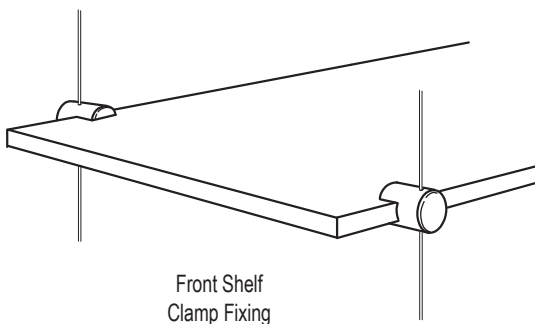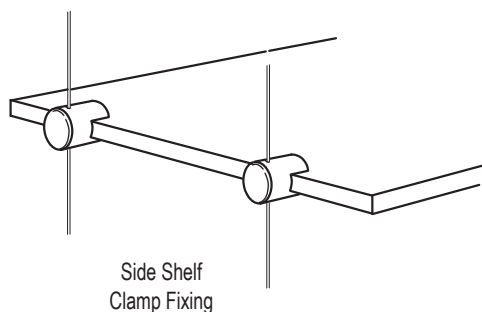


INSTALLATION TIPS


Concrete

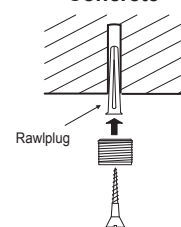


Wood

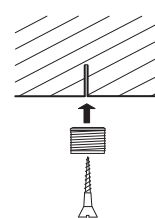

Lathe & Plaster

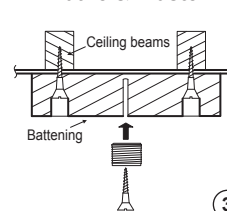

Plasterboard

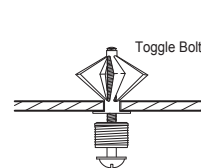

Suspended Ceiling

