

Installation Guidelines

NOVADISPLAY®
INNOVATIVE DISPLAY SOLUTIONS

1.5mm Cable Display Systems

800.753.9688 • www.novadisplay.com



Wall to Floor (CWF) Cable Installation

IMPORTANT: It is essential to check that the top ceiling fixings are strong enough to take the weight of the items being displayed while allowing for the tension in the cables.


- 1) Select the upper height at which the cable is to start. Affix base fitting (A-B) to wall using a suitable fixing for wall type:
 - for wooden walls use a wood screw.
 - for a cavity wall use a spring toggle bolt.
 - for a solid wall use a rawl plug and screw.
- 2) Using a plumb-line; descend from (A), and affix (F) to floor using appropriate type of fixing.
- 3) Loosen the grub screws in fitting (E), using the Allen key provided, and slide fittings (C), (D), and (E) up the cable.
- 4) Pull down the cable, and cut off excess in-line with the decorative line around fitting (F) (see below).
- 5) Tighten (E) on the end of the cable.
- 6) Adjust the tension of the cable by screwing (C) into (F).

NOTE: It is important to check the strength of the top fixing(s). NOVADISPLAY® takes no responsibility for incorrect installation. This responsibility rests with the installer.


Cables are not supplied with fixing screws.

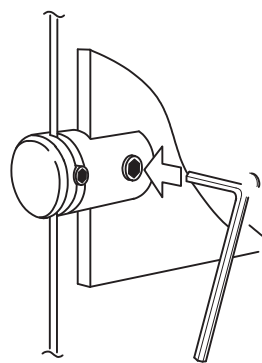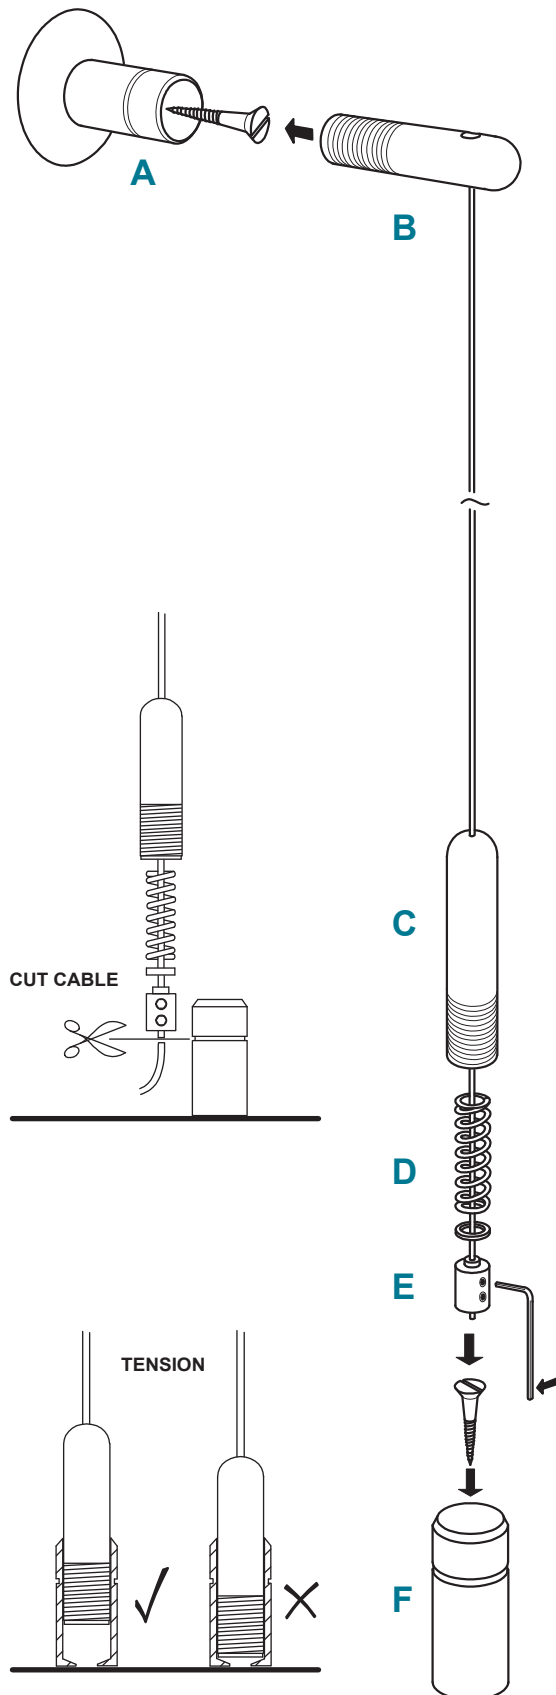

Panel Clamp Support

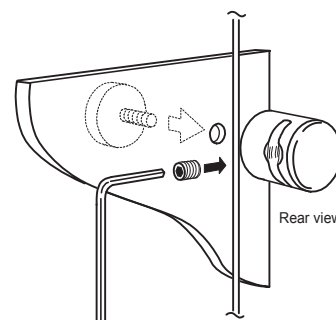


Panel Support w/Holes




INSTALLATION TIPS

Concrete

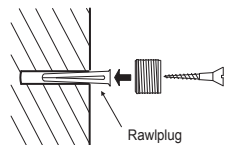


1

Wood

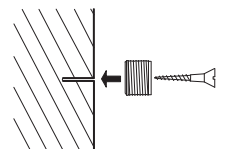


2

Lathe & Plaster

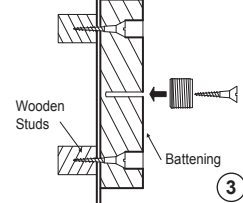

3

Plasterboard

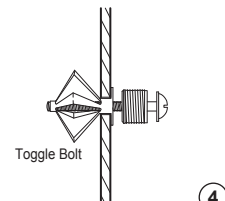

4