


# Installation Guidelines


**NOVADISPLAY®**  
INNOVATIVE DISPLAY SOLUTIONS

10mm Rod Display Systems

800.753.9688 • www.novadisplay.com

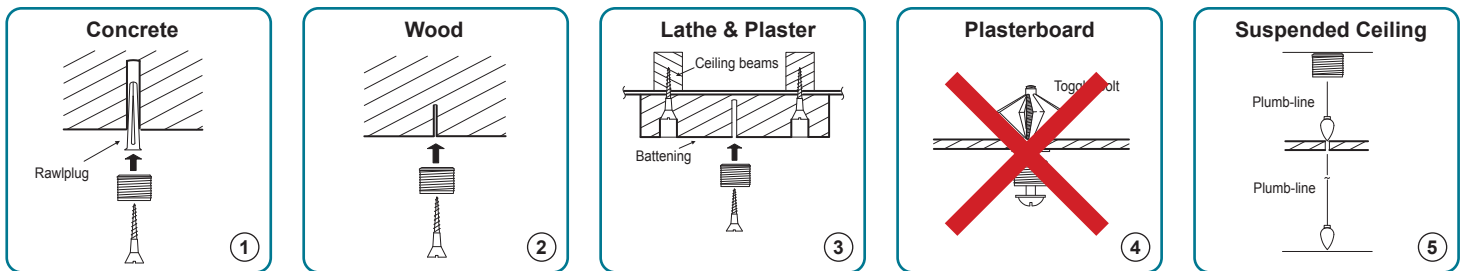

**\*\*\* DO NOT INSTALL INTO PLASTERBOARD (DRYWALL) CEILINGS OR WALLS IF YOUR APPLICATION INCLUDES GLASS SHELVING OR OTHER HEAVY ITEMS.**

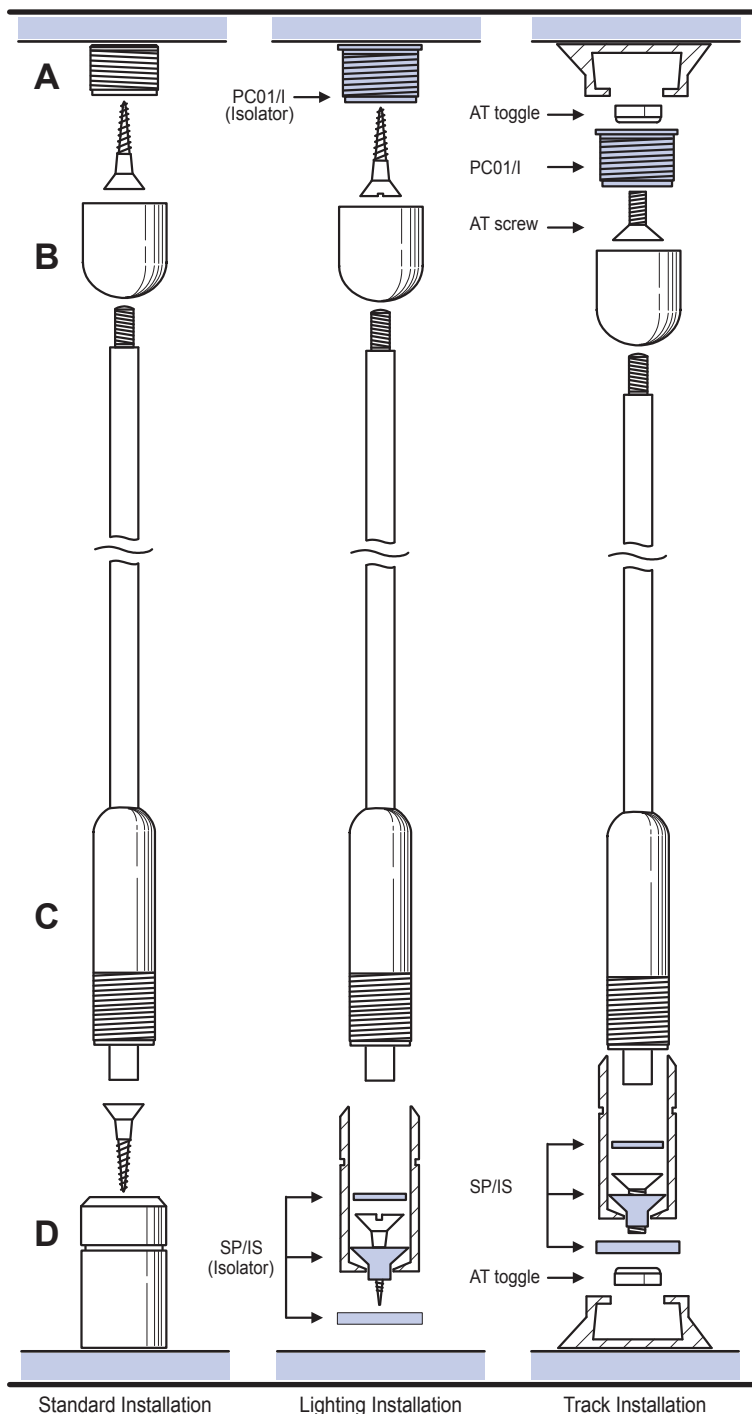

## Top to Bottom (RAS-10) - Rod Installation

**IMPORTANT:** It is essential to check that the top ceiling fixings are strong enough to take the weight of the items being displayed while allowing for the tension in the rods. Isolators must be used where power is required through the rods (lighting etc.), and fixings are into metal, or conductive materials. Remember to replace the top brass fitting with the plastic **PR01/I-10** isolator and add bottom isolator **SP/IS** to bottom fitting.

- 1) Fix fitting (A) to ceiling:
  - for wooden ceilings use a wood screw.
  - for cavity ceilings use a spring toggle bolt.
  - for solid ceilings use a rawlplug and screw.
- 2) Screw part (B) into part (A). This has a right hand thread.
- 3) Using a plumb-line, descend from (A), and fix floor fitting (D) to floor using appropriate type of fixing.
- 4) Screw rod into top fitting (A) using a right hand thread, and add as many additional rods as required.
- 5) Cut bottom rod in line with the decorative line around floor fitting (D).
- 6) Slide cover (C) onto the rod and tighten it onto the floor fitting (D). See below.

**NOTE:** It is important to check the strength of the top fixing(s). NOVA DISPLAY® takes no responsibility for incorrect installation. This responsibility rests with the installer.

If using lighting on rods; we recommend that you use isolators (see illustration) at the top and bottom.

Rods are not supplied with fixing screws.

