

Installation Guidelines

Panel Fixing - RG01 & RG02 Support Installation

- 1) Attach a clamp support to each corner of vertical panel at min. 1" distance from edge (fig 1).


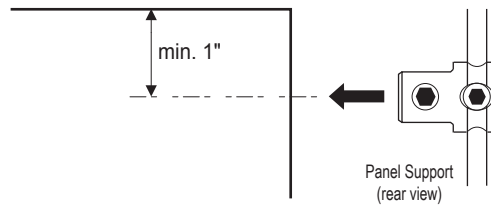



fig 1

- 2) Use additional clamp supports for panels taller than 60 inches to avoid bowing.
- 3) **Mark rod positions on floor area** - Measure the distance between rods centers, and mark rod positions on the floor. With the use of a plumb line; mark and fix rods to ceiling (ensuring that fixings are secure).
- 4) Install rods as per "**Rod Fixing Instructions**" for **RAS** supplied.
- 5) Fix panels onto rods. Adjust panels vertically and horizontally, preferably with a spirit level. Repeat procedure for other panels.

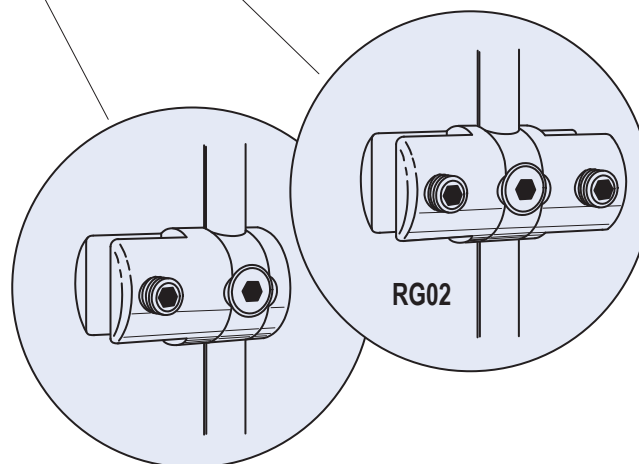


INSTALLATION TIPS

Concrete

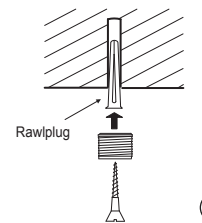


1

Wood

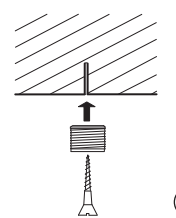


2

Lathe & Plaster

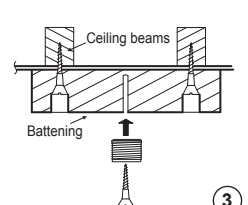


3

Plasterboard

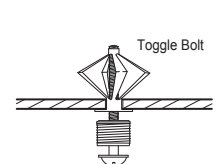

4

Suspended Ceiling

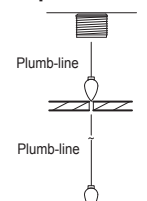

5