

Installation Guidelines

Glass Shelving Fixing - RG06 Support Installation

- 1) Attach a clamp support to each corner of the glass shelf at 3/4"-1" distance from edge (fig 1).


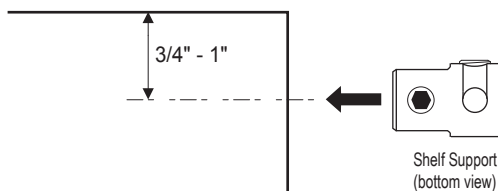


fig 1


- 2) **Mark rod positions on floor area** - Lay shelves on floor and mark rod positions, or use measurements. With the use of a plumb line; mark and fix rods to ceiling (ensuring that fixings are secure).
- 3) Install rods as per "**Rod Fixing Instructions**" for **RAS** supplied.
- 4) **Shelf Fitting** - As a guideline; the lowest shelf should be fixed approx. 24" from the floor, and subsequent shelves approx 12" apart.
- 5) **Fix shelf to rods** - Adjust shelf horizontally; preferably with a spirit level. Repeat procedure for other shelves.

Options - Double sided Clamp Supports


- 1) The double sided clamp support **RG07** will need to be fitted to the rods before the second glass shelf is attached.
- 2) For proper and easier installation it will require two people.

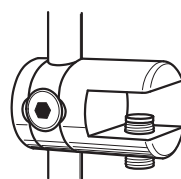


RG06

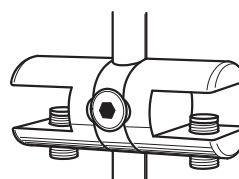


RG07

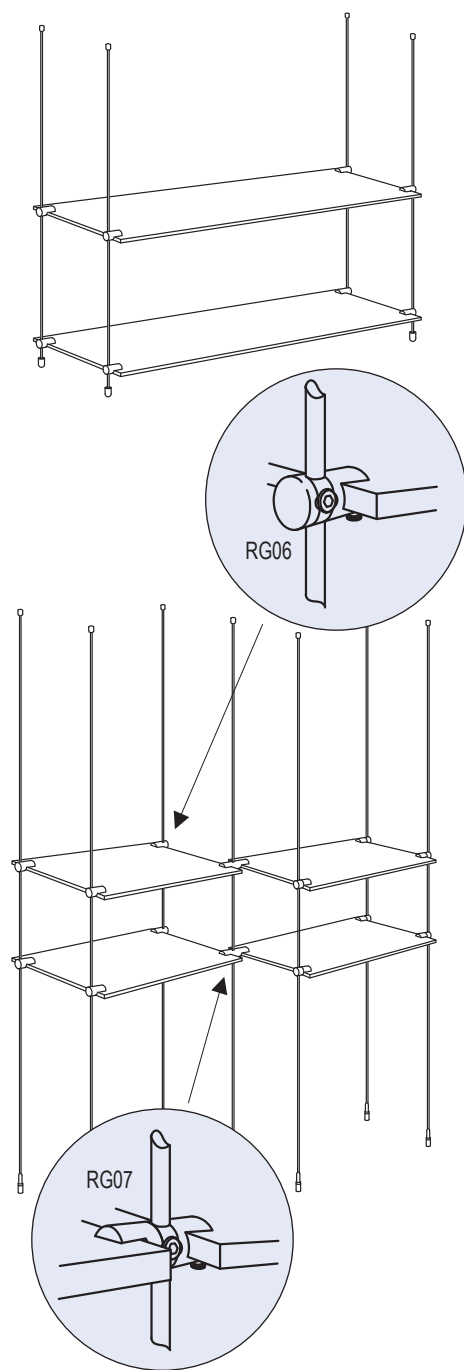

Options - Side & Front Shelf Clamp Fixing

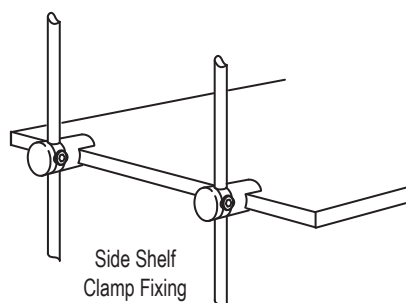


Side Shelf
Clamp Fixing

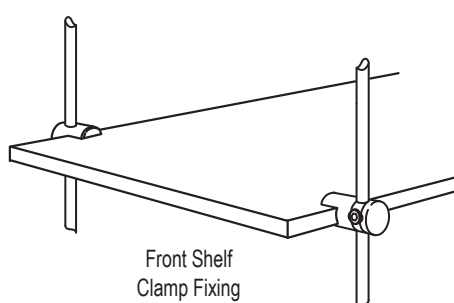

Front Shelf
Clamp Fixing


INSTALLATION TIPS

Concrete

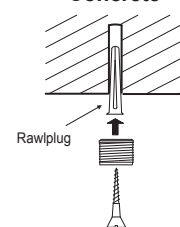


1

Wood

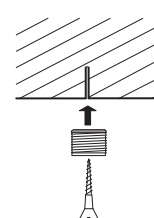


2

Lathe & Plaster

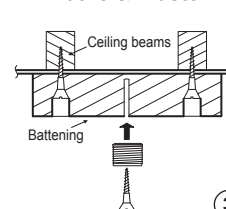


3

Plasterboard

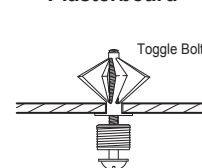

4

Suspended Ceiling

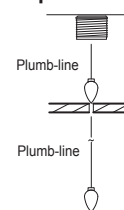

5