


# Installation Guidelines

## 6mm Rod Display Systems

800.753.9688 [www.novadisplay.com](http://www.novadisplay.com)

### RP Rod Support Installation

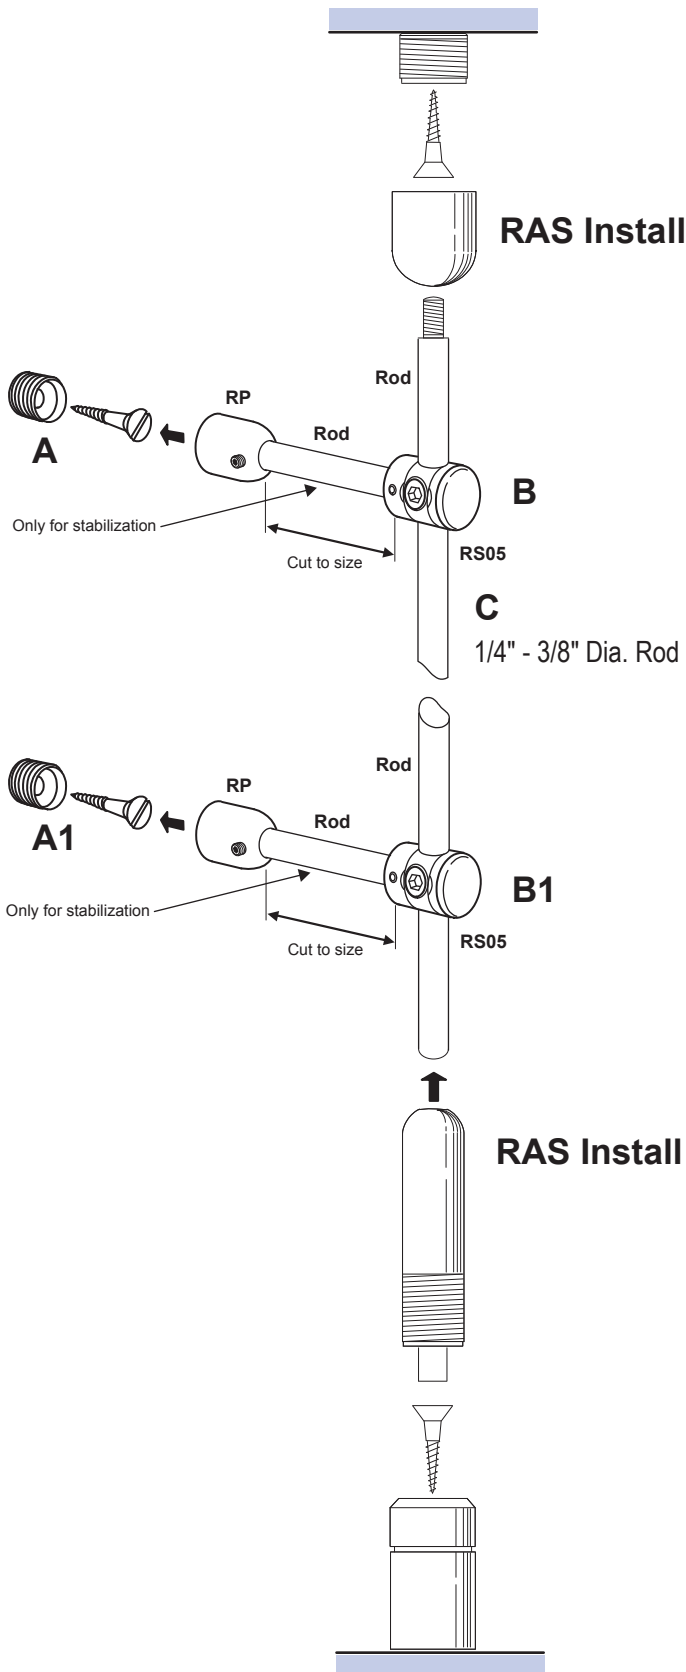

**IMPORTANT:** It is essential to check that the wall structure is strong enough to take the weight of the items being displayed.

**Complete the Top to Bottom (RAS) - Rod Installation**  
As per the RAS Install Guide

- 1) Select the upper height to which rod is to begin. Affix brass fitting (A) to wall using a suitable fixing for the wall type:
  - for wooden walls use a wood screw.
  - for a cavity wall use a spring toggle bolt.
  - for a solid wall use a rawl plug and screw.
- 2) Using a plumb line; descend from (A) to the required position for the bottom fitting and affix.
- 3) Screw rod supports (B-B1) into the brass fittings (A-A1).
- 4) Loosen the set screws on the wall fittings (B-B1). Slide the rod (C) into the open cavities at required position, and tighten back the set screws with Allen Key provided. Rod needs to be cut to size before attaching to the wall.

**NOTE:** It is important to check the strength of the wall fixing(s). NOVA DISPLAY® takes no responsibility for incorrect installation. This responsibility relies with the installer.

Rods are not supplied with fixing screws.

### INSTALLATION TIPS

