

Installation Guidelines

1.5mm Cable Display Systems

800.753.9688 • www.novadisplay.com



Quick Fit Cable (CQQ) - Channel Installation

IMPORTANT: As the top of the cable is being attached to track be certain that the track is attached securely to the ceiling as it must now bear the weight of the display. It is recommended that the track be anchored to a solid structure in the ceiling, at least every 18". The strength of this assembly will be dependent on the security of the attachment.

- 1) Screw the Quick Fit Toggle (B) into Top Support (C) if it is not already screwed into the Top Support.
- 2) As indicated in the drawing, place the Toggle into the track (A) with part (C) resting on the two lips of the track.
- 3) Turn part (C), the Top Support, clockwise to tighten the toggle against the inside of the two lips of the track. Be certain that the wings of the toggle have turned, and have caught on the lips of the track securely.
- 4) Using a plumb-line, descend from (B), and repeat the procedure for the installation of the Bottom Support (G) with Toggle Fixing (H) into the floor track (I).
- 5) Separate the two sections of part (D) and (F), and loosen the grub screws in the small brass piece (E), using the Allen key provided, and slide fittings up the cable to the desired length. (Do not remove from cable).
- 6) Having selected the required length; tighten the brass fitting, and cut off the excess cable.
- 7) Re-connect the two sections (D) and (F), and tighten to adjust tension.


NOTE: It is important to check the strength of the top fixing(s). NOVA DISPLAY® takes no responsibility for incorrect installation. This responsibility rests with the installer.

Cables are not supplied with fixing screws.

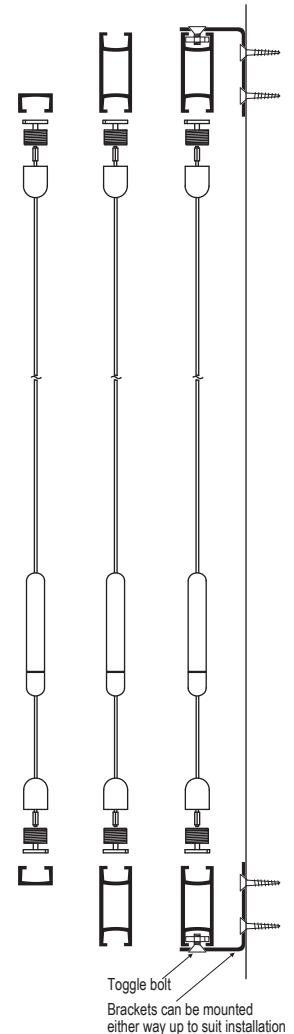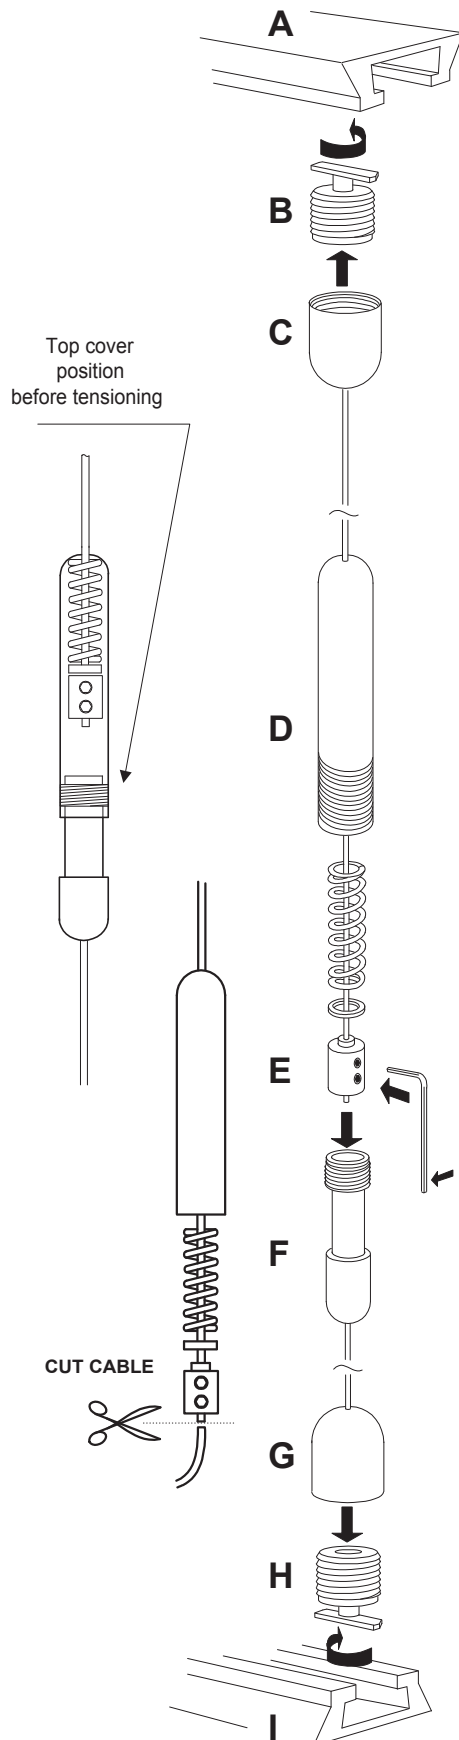

MOUNTING OPTIONS

Quick Fit Toggle (PC01-Q) - Channel Attachment

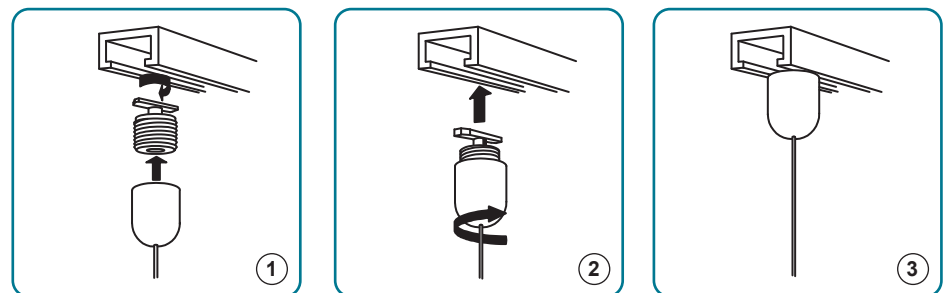

Various Type of Channel

