


AnoMulti



Cable Clips



End Caps

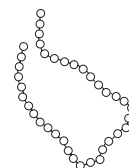

Ball Chains

Instructions for Hanging

Step 1

Insert the poster into the Slim Holder by either sliding the poster into the holder or tapping the holder onto the poster. **Fig. 1**

Note: For thinner substrates, it may be necessary to staple the edge of the graphic before inserting into Slim Holder.

Step 2

Slide Slim holder into AnoMulti holder. **Fig. 2**

Step 3

Insert single ball of ball chain into inner channel of Cable Clip. The cable should snap into place. **Fig. 3**

Step 4

Align one round end of cable clip with top channel of the aluminum rail and insert. Once in place, insert end of ball chain into channel. Then press down on the other round end of the cable clip and slide into rail by pushing on the clip. **Fig. 4**

Note: Be sure to slide the ball chain into place by pushing on the cable clip. Do not pull on, or push against, the ball chain as this will cause it to bind in the channel.

Step 5

Push end caps into place. **Fig. 5**

Step 6

Suspend poster. **Fig. 6**

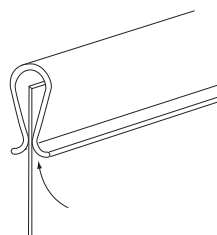


Figure 1

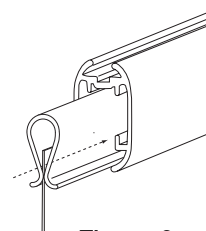


Figure 2

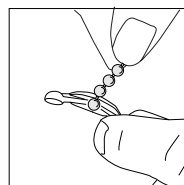


Figure 3

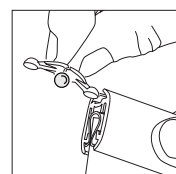


Figure 4

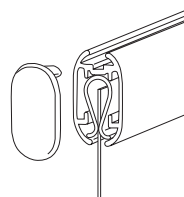
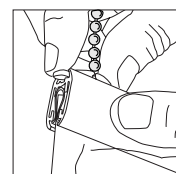


Figure 5

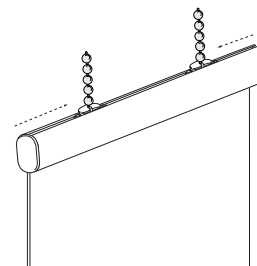



Figure 6

Installation Guidelines

NOVADISPLAY®
INNOVATIVE DISPLAY SOLUTIONS

AnoMulti - Loop & Saucer

800.753.9688 www.novadisplay.com

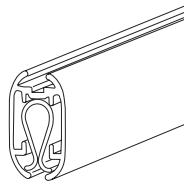


AnoMulti



Cable Clips



End Cap

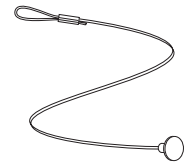

Loop & Saucer

Instructions for Hanging

Step 1

Insert the poster into the Slim Holder by either sliding the poster into the holder or tapping the holder onto the poster. **Fig. 1**

Note: For thinner substrates, it may be necessary to staple the edge of the graphic before inserting into Slim Holder.

Step 2

Slide Slim holder into AnoMulti holder. **Fig. 2**

Step 3

Insert single ball of ball chain into inner channel of Cable Clip. The cable should snap into place. **Fig. 3**

Step 4

Align one round end of cable clip with top channel of the aluminum rail and insert. Once in place, insert end of ball chain into channel. Then press down on the other round end of the cable clip and slide into rail by pushing on the clip. **Fig. 4**

Step 5

Push end caps into place. **Fig. 5**

Step 6

Suspend poster. **Fig. 6**

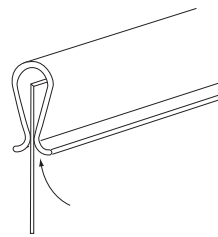


Figure 1

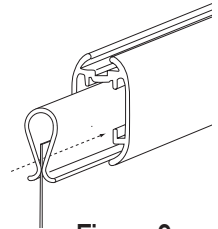


Figure 2

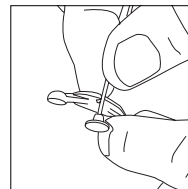


Figure 3

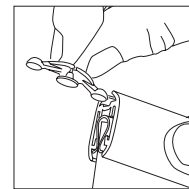


Figure 4

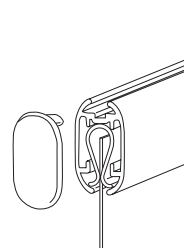
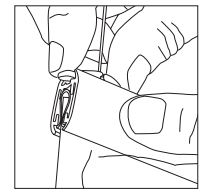


Figure 5


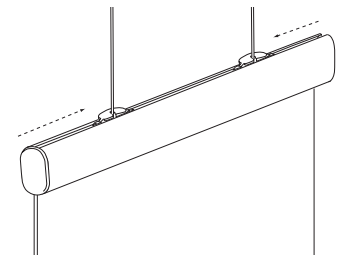


Figure 6

Installation Guidelines




AnoMulti

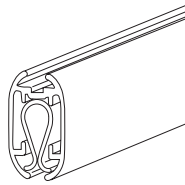

Cable Clips



End Cap

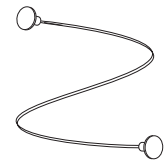

Cable & Saucer

Instructions for Hanging

Step 1

Insert the poster into the Slim Holder by either sliding the poster into the holder or tapping the holder onto the poster. **Fig. 1**

Note: For thinner substrates, it may be necessary to staple the edge of the graphic before inserting into Slim Holder.

Step 2

Slide Slim holder into AnoMulti holder. **Fig. 2**

Step 3

Insert single ball of ball chain into inner channel of Cable Clip. The cable should snap into place. **Fig. 3**

Step 4


Align one round end of cable clip with top channel of the aluminum rail and insert. Once in place, insert end of ball chain into channel. Then press down on the other round end of the cable clip and slide into rail by pushing on the clip. **Fig. 4**


Step 5

Push end caps into place. **Fig. 5**


Step 6

Suspend poster. **Fig. 6**

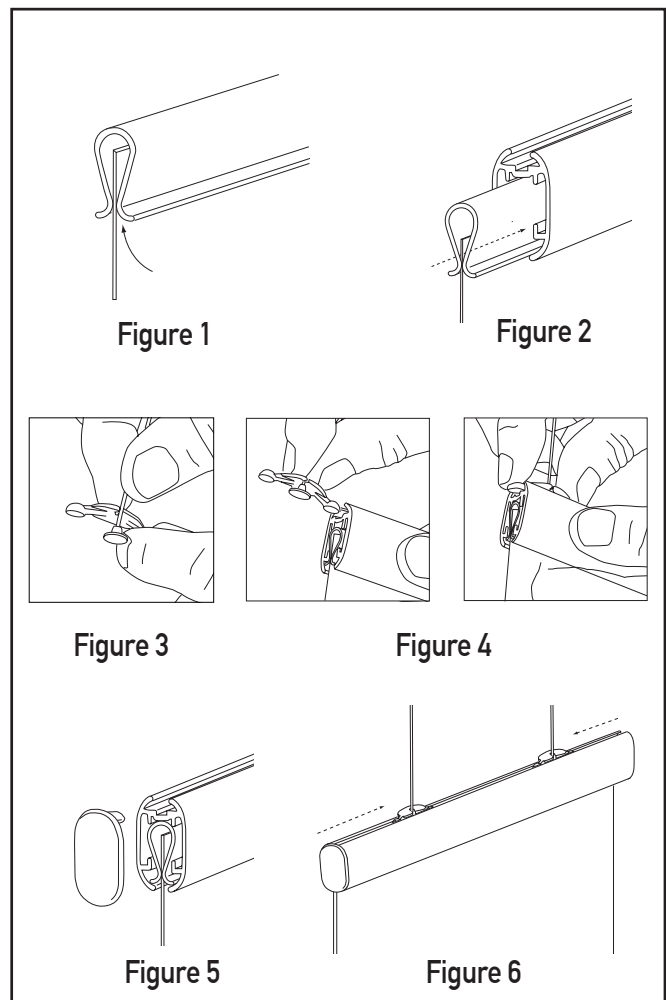

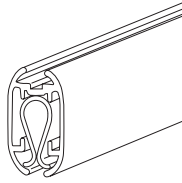

AnoMulti

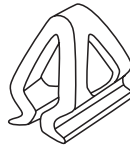

MultiClips



End Caps

Instructions for Hanging

Step 1

Insert the poster into the Slim Holder by either sliding the poster into the holder or tapping the holder onto the poster. **Fig. 1**

Note: For thinner substrates, it may be necessary to staple the edge of the graphic before inserting into Slim Holder.

Step 2

Slide Slim holder into AnoMulti holder. **Fig. 2**

Step 3

Squeeze sides of MultiClip together. **Fig.3**

Step 4

Align the bottom rail of the MultiClip with the top channel of the aluminum holder. Slide MultiClip into rail. **Fig. 4**
Repeat steps 3 & 4 for second MultiClip.

Step 5

Push end caps into place. **Fig. 5**

Step 6

Suspend poster. **Fig. 6**

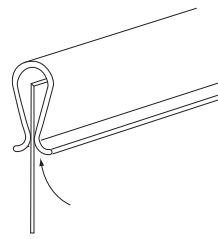


Figure 1

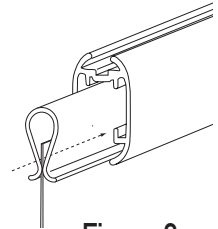


Figure 2

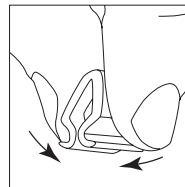


Figure 3

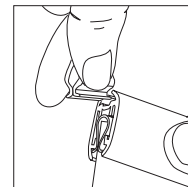


Figure 4

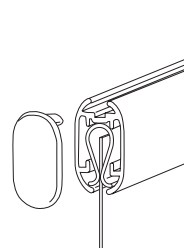
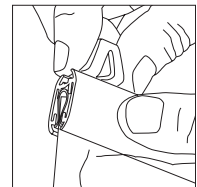


Figure 5



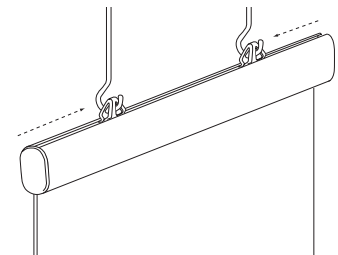


Figure 6

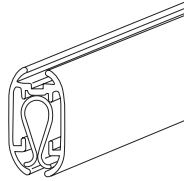

AnoMulti

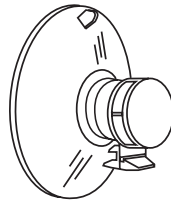

Window Mounts



End Caps

Instructions for Hanging

Step 1

Insert the poster into the Slim Holder by either sliding the poster into the holder or tapping the holder onto the poster. **Fig. 1**

Note: For thinner substrates, it may be necessary to staple the edge of the graphic before inserting into Slim Holder.

Step 2

Slide Slim holder into AnoMulti holder. **Fig. 2**

Step 3

Slide the Window Suction Cups into the top rail of the AnoMulti Holder. **Fig. 3**

Step 4

Push end caps into place. **Fig. 4**

Step 5

Suspend poster. Make sure glass and suction cups are clean and free of dust and dirt.

Important note:

For best performance when first applied and occasionally thereafter, press the middle of the cup (on the cap) to "burp" extra air out

